VIDEOCON

Videocon V1688

User's Manual

Table of contents

Legal Notices iv
Getting Started 1
Safety Precautions 1
Assembling the Device 2
Charging the Device 4
Know your device 5
Phone Layout 5
Key Layout 7
Screen Icons 8
Dual SIM Card 9
Flight Mode 9
Keypad lock 9
Basic Operations 10
Make a Call 10
Connecting to the PC 11
Files 12
Phonebook 13
Search Contact 13
Add new contact 16
Messages 18
Write message 18
Inbox 18
Drafts 18
Outbox 18
Sent messages 18
Archive 18
Delete messages 18
Email 18
Broadcast message 20
Templates 20

Table of contents

Message settings....20
Call history....21
call history....21
Call settings....21
Settings....23
Dual SIM settings....23
Phone Setting....23
Network settings....25
Security settings....25
Phone lock....25
Restore factory settings....27
Sound effect....27
Player....28
Now playing....28
My playlists....28
Bluetooth....29
Multimedia....31
Camera....31
Image Viewer....32
Video recorder....32
Video Player....32
FM radio....33
Schedule FM record....33
Melody composer....33
Slide show....33
Organizer....34
Calendar....34
Tasks....35

Table of contents

World Clock 35
Synchronization 35
Phone sync 35
Games 36
Java 36
Java settings 36
Java default security 36
Games 36
Profiles 37
FM radio 38
Extra 39
Calculator 39
Currency converter 39
Stopwatch 39
Ebook reader 39
Firewall 39
Answer machine 40
Awoke Assistant 41
Alarm 42
Services 43
STK 43
Internet service 43
Data account 44
Third-Party Applications 44
Call 45

Legal Notices

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited.

VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as it is. Except as required by applicable law, no warranties of any kind, either retouched or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

Getting Started

Safety Precautions

Please comply with these precautions / measures to avoid actions that may endanger your safety and those of other road users, and maximize device performance.

Road safety

The use of a mobile phone while driving is illegal. If you need to make or receive a call, move your vehicle to the left side of the road and allow it to come to a complete stop before using your phone.

Aircraft Safety

Switch your phone off while boarding an aircraft. Signal from your phone can affect aircraft system. You are legally obliged to comply with this recommendation.

Emergency Calls

In the event of an emergency, you may dial 100 (Police), 101 (Fire Brigade), and 102 (Ambulance). Even if you are out of the coverage area of your home mobile network, the device is programmed to connect to any available network and place your call.

Battery Use

To extend the battery life of your device

- Use the standard wall charger while charging the phone for the first time.
- During the first 3-4 charge cycles, charge the battery until the battery indicator on the display stops scrolling up and down.
- Avoid partial charging. Wait for the battery to discharge completely before charging it again.
- Use the USB cable to charge the device only during an emergency.

Getting Started

Assembling the Device

1. At the back side of the phone, press the back cover and slide it in upward direction to remove it.

2. If the battery is inside its compartment, lift it in the direction of the arrow.

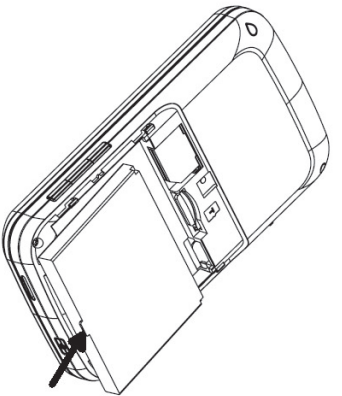

Getting Started

3. Insert the SIM card in the given slot. Make sure that the contact area on the card is facing the connectors on the device and that the bevelled corner is facing the top of the device.

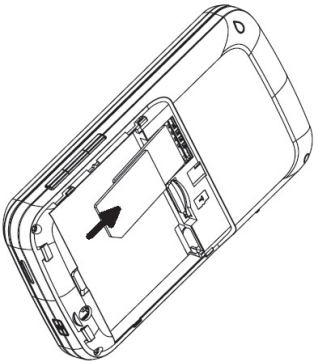

4. Insert the memory card in the slot and push the memory card in until it locks into given place. Make sure that the contact area is facing the connectors in the device.

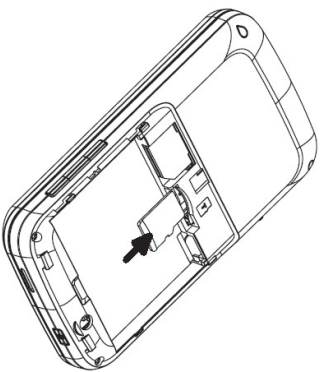

Getting Started

5. Insert the battery. Align the contacts on the battery with the corresponding connectors on the battery compartment and insert in the direction of the arrow, and then close the battery cover.

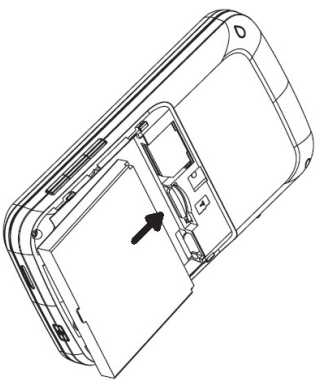

Charging the Device

Before using the phone for the first time, you must charge the battery.

To charge the device:

1. Insert the smaller end of the travel charger into the multifunctional jack at the right-hand side of the phone.
2. Put the adaptor end of the travel charger into a standard AC wall socket.
3. When the battery is charged completely, the battery indicator icon on the screen becomes stable and stops scrolling.
4. Unplug the travel adaptor from the phone.

NOTE: Improperly connecting the travel adaptor can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

Know your device

Phone Layout

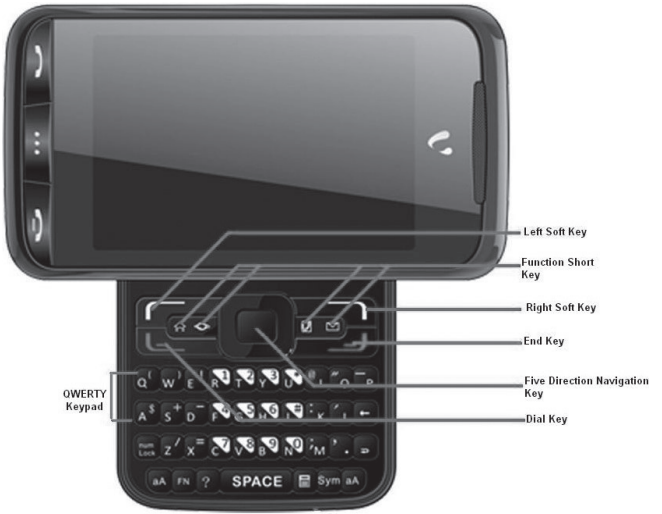

Know your device

Phone Layout

Know your device

Key Layout

Accessing menus and icons

Move Up/Down navigation key to move the scrollbar vertically.

Similarly, move Left/Right navigation key to move the scrollbar horizontally.

QWERTY Keypad

Your phone comes with a full QWERTY keypad that makes typing easier on the phone. To view the QWERTY keypad on your phone you have to twist the device at an angle of 90^0 in the clockwise direction. The various keys available on the keypad are as follows:

- **Sym Key:** Press once if you wish to insert any special characters while composing a new SMS, MMS, or E-mail.
- **Volume Key:** Adjust volume of receiver. Press volume key to adjust volume in music player or during playing movie.
- **FN Key:** To write numbers and Special characters from the QWERTY keypad press FN key twice.
- **Num Lock:** To write numbers from the QWERTY keypad press num Lock key.
- **Dial/Send Key:** Press Dial key to view the Call history. Scroll to the desired number, and press again to make a call.
- **End Key:** End or reject calls. Press and hold this key to turn phone On/Off, cancel function and return to the idle screen.
- **OK Key:**
  - o In idle mode, press to open Menu.
  - o In menu, use to perform the functions that display in the lower left of the display screen.

Know your device

Screen Icons

Screen icons provide important information about battery level, network signal strength and so forth.

Icon	Definition
	SIM 1 Network signal level
	SIM 2 Network signal level
	Indicates battery capacity
	Alarm is activated
	Keypad lock is activated
	SIM 1 Unread Messages
	SIM 2 Unread Messages

Icon	Definition
	SIM 1 Missed calls
	SIM 2 Missed calls
	General profile activated
	Meeting Profile activated
	Outdoor profile activated
	Indoor profile activated
	Headset profile activated
	Save power Profile
	Silent profile
	Bluetooth

Know your device

Dual SIM Card

Your phone support dual SIM cards, allowing you to use two different phone numbers on one mobile phone. However, at any given time, only one SIM card will be active.

Flight Mode

Continue using basic operations of the device while the transmitting function is switched off.

In Flight Mode, you cannot use the call or messaging functions of the phone. However, use other functions of the phone is permitted.

Keypad lock

The keypad of your device locks automatically to prevent accidental dialing. To enable Auto keypad lock or to change the period after which the keypad is locked, select **Home → Settings → Security setup → Auto keypad lock.**

Select **None** to disable Auto keypad lock. Alternately select the time-delay (in seconds) after which the keypad is locked automatically.

To lock/unlock the keypad manually from the idle screen, press On/Off key on the top of the phone.

Basic Operations

Make a Call

Using Virtual Keypad

In the idle mode:

1. Touch the phone icon adjacent to the Home icon to display the virtual numeric keypad.
2. Enter the phone number including the area code. Touch **Clear** to erase a digit.
3. For international calls, insert the '+'sign followed by the country code, area code (without the initial zero and phone number).

From Phonebook

Touch **Home → Phonebook** to view the contacts. Scroll the bar up and down to select the contact you wish to call, and then press the Call key to make a call.

Using Call History

Touch Home Call history and select the SIM for which you want to display the call history. Scroll the bar up and down to select a contact, and select the SIM1 or SIM2 based on which SIM you want to use for the call.

Answer Calls

To answer an incoming call, press the Dial/Send key.

Select **End** key to end or reject the call.

Working with Call Options

During a call, the phone allows you to perform various functions.

To view the available options, press Options during a call:

- **Hold single Call:** Place the active call on hold.

Basic Operations

- **End single Call:** End the active call.
- **New call:** Make a new call.
- **Phonebook:** View the phonebook.
- **Messages:** View the Messages menu.
- **Sound Recorder:** Record the active call.
- **Background** Sound Enable playing of background sounds during a call. Choose the desired sound effect from the Effects list.
- **Mute:** Turn On/Off the microphone.
- **DTMF Dual-tone Multi-frequency:** You can choose On/Off, to send dual-tone multi-frequency sound.

Connecting to the PC

You can connect this handset to a computer's USB port using the cable provided with the device packaging. To do so:

1. Connect the smaller end of the cable to the input slot at the right side of phone, and the other end to a standard USB port on your computer.
2. An on-screen dialog prompts you to select the connection mode. Your options are:
    - **Mass storage:** Access the phone and memory card of your phone as a regular hard drive partition on your computer. Display Map the device as drive on the computer and transfer files between the PC and phone. You can take backup of phone data to your computer.
    - **Web Cam:** Use the device as a web camera to voice chat on your favorite instant messaging application.
    - **COM port:** Use this device as a modem to browse the Internet on your computer using your phone's GPRS connection.

Files

View the files stored in the phone memory and on the microSD card. Select Phone or microSD card option, and then press **Options** to display the following options:

- **Open:** View contents of an existing folder.
- **Format:** Erase all contents from the memory card.
- **Rename:** You can rename the folder available in Phone or microSD card.
- **Details:** Displays details of microSD card such as Total size and Free space.

Note: Rename and Details options are displayed only for microSD card.

Phonebook

Phonebook is a location in your phone's internal memory on which you can store names and numbers of contacts. The SIM card also allows you to store phone numbers, though the service provider decides the capacity. Even though, the SIM card and the phone's internal memory are physically separate, they are used as a single entity known as Phonebook on the phone.

Search Contact

Search a contact just by entering the first few letters in the contact's name. As you type, all matching contacts display as a list, use the navigation keys to select the required contact, and press the **Dial** key to initiate a call to this contact.

Once you are done with searching, you can do the following with the selected contact:

View

Touch **View** from the Phonebook menu to view details of the selected contact.

You can select the number and then press the options to Edit the selected number, Send message at the selected contact, or place a Call to the selected contact.

Send message

Press **Home → Phonebook → Options → Send message,** Write message screen is displayed.

You can write the message and press Options to **Enter recipient** number or select the number directly from **Add from Phonebook** option.

While writing a message, you can choose different options like Input method, Add picture, Add sound, Add video, Add subject, and Slide options etc.

Call

You can to make a call to the selected number through SIM1 or SIM2.

Phonebook

Edit

Modify currently selected contact number. You can modify name, number and others details of the selected contact.

Delete

Select to delete the selected contacts.

Copy

Copy the selected record to SIM1, SIM2 card phonebook contact, and to file as Vcard. To File option consist of both Phone memory and microSD card.

Move

Lets you move the selected contact from SIM1 to Phone or Move from SIM1 to SIM 2.

Send Contact

Lets you send the selected contact As text message, As multimedia message, As Email, and Via Bluetooth.

Add to Blacklist

Enables you to add the selected contact into Blacklist from whom you do not wish to receive calls.

Add to Whitelist

Add the selected into the Whitelist. If you set the status On, you will receive the call only from the numbers that you add in the white list.

Caller groups

Use Caller groups to organize your phonebook for easier access, and faster retrieval of contacts. For example, you can put all of your friends in the **Friends group,** and your office colleagues under the **Business group.** Combining contacts in a group allows you to perform the same action for multiple contacts quickly. For example, you could

Phonebook

collectively send greetings to all contacts in the group.

Phonebook settings

Touch **Home → Phonebook → Options → Phonebook settings.**

The available options under phonebook settings are:

- **Preferred storage:** Choose the location where you wish to store the contacts. You may choose SIM1, SIM2, Phone, and All.
- **Speed dial:** Enable or disable speed dial, and associate contacts to the numbers available in the speed dial list.
- **My vCard:** Store your personal contact information as a vCard to allow quick sharing of your details with contacts. Once you have entered your contact information, use the Send my vCard option to send your vCard via SMS, MMS, and Email or through file transfer over Bluetooth. You can also save your vCard as a file to the phone memory or to the microSD card.
- **VCard version:** VCard is a file format standard for sharing electronic business cards. However, not all mobile phones support the same vCard version. Select VCard version as VCard 2.1 or VCard 3.0.
- **Extra numbers:** It has the following options:
  - **SIM 1/2 owner number:** You can Edit or Erase the owner number as required.
  - **SIM 1/2 service dialing number:** The Service Dialing Numbers feature allows for the storage of numbers related to services offered by the network operator/ service provider in the SIM/USIM (e.g. customer care). The user can use these telephone numbers to make outgoing calls, but the access for updating of the

Phonebook

numbers shall be under the control of the operator.

- **SOS number:** The phone gives you an option to dial numbers for contacting in case of any emergency.

- **Memory status:** View used and available memory for storing contacts.
- **Copy contacts:** Lets you copy the contacts from SIM1 to phone, Phone to SIM1, SIM2 to phone, Phone to SIM2, SIM1 to SIM2, or SIM2 to SIM1.
- **Move Contacts:** Lets you move the contacts from SIM1 to phone, Phone to SIM1, SIM2 to phone, Phone to SIM2, SIM1 to SIM2, or SIM2 to SIM1.
- **Delete all contacts:** You may able to delete all contacts from SIM 1/2 or from the Phone memory.
- **PhoneBook Import:** You may able to Import list of contacts. The options are Import to Phone, Import to SIM1, Import to SIM2.
- **PhoneBook Export:** You may able to Export list of contacts. The options are Export From Phone, Export From SIM1, and Export From SIM2.

Add new contact

Add a new contact to the phonebook. You can choose to store the contact in the SIM cards and Phone memory.

To add a new contact:

1. Touch **Home → Phonebook → Add new contact,** and from Select option choose the location where you want to store this contact. Your options are SIM Cards and Phone memory.
2. Select **Name** and enter a name for the contact.
3. Select **Number** and enter phone number, and

Phonebook

save the contact in the desired location.

NOTE: If you choose to store the contact on SIM memory, you can only enter a Name and a Number, but if you want to store the contact on Memory card or Phone memory, then you can enter other details such as company name, e-mail address, or alternate phone numbers etc.

The available options under Add new contact are Caller groups and Phonebook settings those are explained earlier in this section.

Messages

In Messages, you can send and receive text and multimedia messages. To launch messages on the idle screen, touch **Home → Messages** to view the available functions:

Write message

On the idle screen, Touch **Home → Messages → Write message** to display the write message screen. Touch **Options** on the bottom of the screen and you can choose different options like Input method, Add picture, Add sound, Add video, Add subject, and Slide options etc.

Inbox:

All incoming text messages are stored in the Inbox, and are grouped by sender. Messages you receive are stored in Inbox folder.

Drafts:

Partial or complete text messages that you wish to send at a later time.

Outbox:

Stores outgoing messages while they are being sent.

Sent messages

Stores messages that you have sent.

Archive

You can move your message to archive folder.

Delete messages

Delete messages allows you to delete the messages stored in Inbox, Drafts, Outbox, Sent messages, Archive, and All messages.

Email

Use Email to send and receive corporate or Web based emails from the phone. To be able to do so, you need to configure your phone to download e-mails.

Messages

To successfully configure e-mail on your phone, you will need to know the server names and port address for both Incoming and Outgoing mail servers. The options available in Email are:

- **Send and Receive:** Download new messages, and send outgoing messages.
- **Write Email:** Compose new Email messages.
- **Inbox:** View received Email messages.
- **Outbox:** Stores Email messages that are being sent from your phone.
- **Sent:** Stores the copies of Emails you have already sent.
- **Drafts:** Partial or complete Email that you wish to send at a later time. To save a message as a draft, press **Back** while writing a message and choose **Save** to save the message as a draft.
- **Clear mailbox:** Delete messages from the Inbox, Outbox, Drafts, and Sent folders.
- **Delete marked emails:** Select individual messages from the Email folder and choose this option to delete them.
- **Email accounts:** To configure an Email account touch **Home → Messages → Email → Email accounts,** and then press **Options** to create **New account** to begin creating the Email account. The options are
  - **Email address:** Specify the Email address, and choose **Options → Next** to display the **Protocol** screen.
  - Choose the protocol your e-mail provider offers, options are **POP3** and **IMAP.**
  - Follow the on-screen instructions to complete the configuration.

Messages

NOTE: To configure Email on your device, you need to know the server addresses and port numbers of the incoming and outgoing mail servers.

NOTE: You would also require a working GPRS connection that will be used to connect to your Email provider's servers.

- **Templates:** Templates stores 10 preloaded/ pre-written text messages for ready usage.

Broadcast message

A network service, via which you receive messages on various topics from your service provider, can set the receive mode to ON/OFF. This service also provides location update, and messages promoting operator products or services. When you receive such a message Broadcast messages are flashed on the device screen, but can be viewed later from the **Read message** folder.

Templates

Store user defined and default texts as well as multimedia messages that are often send.

Message settings

Touch **Home → Messages → Message settings.**

Edit the profile settings, common settings, and the preferred storage. You can also check the memory status.

Using Message settings, you can also create different profiles, set delivery report, path of the reply and save sent messages, check available memory, or choose the location where you wish to store the messages.

NOTE: Please get in touch with your service provider regarding the availability of multimedia messaging services.

Call history

Call history

Touch **Home → Call history → Call history,** to view call history touch Ok and you will be able to view missed calls, received calls, and dialled calls etc. Each entry in Call history is prefixed by the SIM using which the particular call was made or received.

The **call history** menu comprises the following options:

- **Missed calls:** Calls you were unable to answer before the termination of ringing.
- **Dialled calls:** Displays the list of latest dialed calls.
- **Received calls:** Displays the list of latest received calls.
- **Delete call logs:** Delete Missed calls, Dialed calls, Received calls and Delete all on the SIM card.
- **Call timers:** Displays the exact timing of Last call, Dialled calls, Received calls and also Reset all call timings on the SIM card.
- **Call cost:** Approximate cost of the outgoing calls.
- **Text message counter:** Total number of messages sent or received by your phone.
- **GPRS counter:** View the amount of data transferred during packet data connections.

Call settings

Touch **Home → Call history → Call settings,** to view call settings touch OK and you will be able to view Caller ID, Call waiting, and Call divert etc. The call settings are same for both the SIM cards. The available options are:

- **Caller ID:** Set by Network, Hide ID or Send ID.
- **Call waiting:** You can activate this function or deactivate it, and also view the current settings via Query status.

Call history

- **Call divert:** You can set to forward the incoming call in different conditions and enable to Activate/Deactivate call diversion and check the Query status.
- **Call barring:** In order to activate this service, it requires the services provided by the network service provider. When you change barring password, you need to input the old password.
- **Line switching:** Enables you to select Line 1/2 for the phone. These settings are only available only for SIM cards (through service provider).

Advance settings

Touch **Home → Call history → Call settings → Advance settings.** The available options under Advance settings are:

- **Audio redial:** You can select to redial the number automatically when a call is not connected.
- **Background sound:** Select from a variety of sound effects to conceal your actual location from the caller. For example, play traffic sounds to indicate to the caller that you are driving, while in reality you are watching a movie.
- **Call time display:** Enable to view the call duration for the active call.
- **Call time reminder:** After setting this function to 'on', it will offer a warning tone towards the single or periodic setting as your own during the call process, so you will be reminded of the call time at periodic intervals during a call.
- **Auto quick end:** Set the Auto Quick End to On/Off.
- **Reject by SMS:** You can reject a call by sending an SMS.

Settings

Dual SIM settings

You can select the SIM card that you wish to use from the dual SIM settings. The available options are:

- **Dual SIM open:** This option activates both the SIM cards.
- **Only SIM1 open:** This option activates only SIM1.
- **Only SIM2 open:** This option activates only SIM2.
- **Flight mode:** Disables all RF based communication for both SIM1 and SIM2. However, you can use other features/ functions of the phone, such as games and alarm.

Pen calibration

When you feel that the touch screen of the mobile phone does not respond accurately, you may adjust the accuracy of the touch screen by Pen calibration. According to the prompts and click the icon center after three accurate clicks, the screen will display the success of the touch screen.

Without proper calibration, software may not respond correctly when a soft button or icon is pressed.

Phone settings

Touch **Home → Settings → Phone settings.**

You have following options listed under phone settings:

- **Time and date:** Let you set home city, time and date on the phone.
- **Schedule power on/off:** Let you set a particular time on the phone when the phone should power on/off itself.

Settings

- **Language:** The device currently supports English language only.
- **Pref. input methods:** This enables you to select the text input method. They are abc and Numeric.
- **Display:** Under Display, you can set a host of different characteristics of the phone. Like
  - **Wallpaper:** Set favorite wallpaper on the main screen or your phone.
  - **Wallpaper Rotate:** Set the wallpaper of your phone when you rotate it an angle of 90^0.
  - **Screen saver:** Let you set an image as a screen saver.
  - **Show owner number:** Display the owner number on the screen.
- **Vibrate Setting:** Set whether the mobile phone turns on vibration, when you tap on touch screen. You can set the vibration level also.
- **Greeting text:** Let you set your own greeting message when you power ON the phone.
- **Shortcuts:** Set the shortcuts for various functions so that they can be accessed from a single place.
- **Dedicated key:** This option helps you dedicate/map certain key features of the phone with the Directional keys (UP/DOWN/LEFT/RIGHT) of the phone. At anytime you can change the mapping and select a new feature from the list of features available.
- **Auto update of date and time:** Enable you to sync phone time to network time.
- **Handwriting:** Set related parameters of the handwriting mode, including the handwriting speed as Medium, Slow, and Fast. You can also set the color of the touch pen.

Settings

- **Backlight settings**
  - **LCD backlight:** Control the brightness and time for which backlight displays.
  - **Key Backlight:** Turn On/Off of the key press light.

Network settings

Network settings provide you the option to select a desired network and addition of a new network to the network list. The network setup gives you the following options:

- **SIM 1/2 Network settings:** The options available under network settings are
  - Network selection
  - Preferences

Security settings

Adjust settings to secure your device and data.

SIM 1/2 security settings

- **SIM lock:** Activate or deactivate the SIM lock feature to require a password before using the phone.
- **Fixed dial:** Limit outgoing calls to specific numbers only.
- **Change password:** Change the password for managing SIM security features. If this is the first time you are trying to change the password, use "0000" as the default password when prompted.

Phone lock

Phone lock protects your phone from any unauthorized usage or unauthorized access to information stored in the phone. When phone lock is activated, the phone would ask for the phone lock code every time you power-on the phone. Enter the lock code (default as 0000) to use the phone. You can simply unlock the phone by

Settings

touching **Home → Settings → Security settings → Phone lock,** enter the lock code and put it off.

Auto keypad lock

Enable Auto keypad Lock to have the devices disable the keypad after staying idle for same time. This is done to prevent against accidental dialing. For more information on this feature, refer to the **"Keypad lock"** section earlier in this document.

Change password

Change password option to change Phone lock password.

Certificate manager

View certificates that were used to verify the identity of a web site you visited.

Privacy lock

Touch **Home → Settings → Security settings → Privacy lock.**

By entering the password (default as 0000), you can protect your Message, Phone Book, File Manager, Call logs, and Idle Screen.

Mobile Tracker

Use Mobile tracker to help locate your device if it is lost or stolen. When someone inserts a new SIM card in your device, the Mobile tracker automatically sends a message to recipients, so that you can initiate steps to recover it.

To activate Mobile Tracker, select **Home → Settings → Security settings → Mobile Tracker.**

NOTE: You will be required to enter your phone lock password (or create one) to access the Mobile tracker.

1. Change status to On.
2. Enter Receiving SMS phone number manually.

Settings

The instant a new SIM card is inserted into your device, its number is sent via text message to the number you specified in step 2 above.

Restore factory settings

Selecting this option will ask you to enter the password to restore the phone to factory settings. The default password is set as 0000.

Sound effects

This option enables you change the sound effects of the Audio player.

Player

Launch Music to listen songs stored on your microSD card. The available options are

Now playing

Play the selected audio and video files.

My playlists

You can create a folder in the play list in order to play media files. Touch **Home → Player → My playlists → options,** and then set and edit the new folder. Select to add the play path, the available options are Phone or Memory card. All the music files are stored in the selected folder. Once you have given the path, you can directly play the media files from the designated folder.

Note: If you wish to add file from phone memory, select playlists store location as phone memory, and if you wish to add file from microSD card, select the location of playlists as microSD card.

Bluetooth

You can communicate with other compatible devices through wireless Bluetooth connection. Compatible devices may include Mobile Phones, Personal Computers, Bluetooth headsets. Via Bluetooth, you can send or receive pictures, videos or music files.

To access this menu, touch **Home → Bluetooth.** The available options are:

- **Power:** Select Power On to activate Bluetooth and Power Off to deactivate it.
- **Inquiry audio device:** Locates other Bluetooth activated audio devices in the vicinity.
- **My device:** It is a list of devices which have been paired with your phone before.
- **Active devices:** Locates active Bluetooth devices in the vicinity.
- **Settings:** You can set Mobile Phone Bluetooth. The available options are::

o **Visibility:** Set the Visibility of the Bluetooth.

o **Change device name:** Change the Bluetooth device name.

o **Authentication:** Authenticate while Bluetooth connection is On/Off.

o **Audio path:** To set whether the audio is to be transferred to headset or stay in phone while Bluetooth audio is connected.

o **Block list:** Select the Bluetooth devices that you do not want to allow to connect to your device. Once you add a device to your block list, it will not show up in the device list that display when you search for Bluetooth devices.

o **Storage:** Set whether the files to be stored in Phone memory or microSD card.

o **FTP Settings:** Set access right for active FTP connection.

Bluetooth

- **About:** Displays the name of the Bluetooth Handset device, Device address, and Supported profiles.

  Note: Bluetooth needs to be activated to perform all the above mentioned functions.

Multimedia

Camera

Use the in-built camera to take and save pictures. Touch **Home → Multimedia → Camera,** to launch the camera function. To take a picture, focus the camera towards the object you wish to click, and then touch Camera icon in the touch screen.

NOTE: Do not move your hand until the captured photo displays on the screen as a still image.

Use the **Options** command to view and use other camera functions:

- **Photos:** View the clicked images captured by your phone. You can view, set the image as a wallpaper/screensaver, rename and delete the images etc.
- **Camera settings:** Select shutter sound, EV, Contrast, Anti-flicker, Delay timer, and Cont. shot for the camera.
- **Image settings:** Set the image size (in pixels) and Image quality as Good, Low, and Normal.
- **White balance:** Increase or decrease the white balance to get image colors to display as accurately as possible. You can select any option from the displayed list.
  - Auto
  - Daylight
  - Tungsten
  - Fluorescent
  - Cloudy
  - Incandescent
- **Scene mode:** Select the Auto or Night mode for the camera to capture images in dark.
- **Effect settings:** Set the effects that you wish to use for the captured images.
- **Storage:** Choose the location on which you would like to save the captured pictures. You may either choose Phone memory or the microSD card.

Multimedia

- **Restore default:** Undo all customizations and restore to factory settings.

Image Viewer

The Photos module stores all your pictures which are captured by the phone camera. It provides you the option to view, rename, and delete the images etc.

Video recorder

Touch **Home → Multimedia → Video recorder,** to launch the Video recorder application. Position the camera towards the moving object, and select the recording icon in the touch screen. The recorded video can be saved as 3GP file. To stop recording, touch the stop recording icon.

To watch the recorded videos, select Video player. The options available for video recorder settings are:

- **Camcorder settings:** Set the White balance, EV, Night mode, and Anti-flicker of the video recorder.
- **Video settings:** Set the quality of the video as Normal, Good, Fine, or Low.
- **White balance:** This is same as mentioned earlier in "Camera" section.
- **Effect settings:** Select different effects for your recorded videos, such as Normal, Grayscale, Sepia, Sepia green, Sepia blue and so forth.
- **Storage:** Select the storage location of the recorded videos to phone memory or to microSD card.
- **Restore default:** Restore the default settings of the camcorder.

Video Player

Play videos stored on the microSD card. Using the Video Player, you can watch videos in AVI, MP4, 3GP, and RMVB formats.

Multimedia

Select **Options** to perform additional functions.

FM radio

To know in detail about this option see "FM radio" section later in the document.

Schedule FM record

You can program this phone to record certain FM channel at a certain time and date.

Melody composer

Compose your own melodies and use these as ringtones, or send to friends as MMS attachments.

Slide show

Display the photo saved in phone memory or microSD card as Slide show.

Organizer

Calendar

You can use the calendar to keep track of important meetings. To access calendar, touch **Home → Organizer → Calendar.** The calendar will be displayed on the phone screen. Touch Options and on a selected date you can view:

- **View:** If there is a special background color on a date, it means there is some task on that day. You can also view any Note/Remark mentioned by you for a task stored by you earlier.
- **View all:** View all the events.
- **Add event:** When you add a new event you can do the following:
  - **Start date and time:** Set start date and time for the event.
  - **End Date and Time:** Set end date and time for the event.
  - **Subject:** Enter the subject of the event.
  - **Alarm:** Set the alarm status On/Off.
  - **Repeat:** Set the alarm to repeat Once, Everyday, Weekly, and Monthly, and so forth.
  - **Location:** Enter the location of the event.
  - **Priority:** Set priority of the event as Medium, High, or Low.
  - **Details:** Enter details about the event.
  - **Status:** Set the status of the event as Done or Undone.
- **Delete event:** Delete an event of a Spec period, Overdue or All.
- **Jump to date:** Enter a date, and then select OK to go to a specific date for entry/edit/viewing of task for that date.
- **Go to weekly view:** Toggle between week/month of the calendar.

Organizer

Tasks

You can use your phone to keep track all of your Date, Call and Anniversary.

World Clock

World clock can be used to know the time in various cities across the world. You can see a world map and immediate time in those cities using world clock. Touch **Home → Organizer → World clock,** to view a particular city time.

Synchronization

Log on to the Internet, and use any search engine to search for websites that allows you to backup and/or sync your phone's contacts and calendar to their site. It is recommended that you do this from time to time, so that your contacts are updated and available for use with another phone if you were to misplace your mobile phone.

Phone sync

After starting the mobile phone Bluetooth, searching the mobile phone Bluetooth device and establishing the Bluetooth connection, you can synchronize phone contact data in this mobile phone with the other compatible device.

Games

Touch **Home → Games,** to access Games menu. The options available under games menu are

Java

List of java enabled games or applications currently available on your phone.

Java settings

Tweak various options while playing Java games. The options include, sound, vibrations, backlight, and the permitted heap size that help in making game play smoother.

Java default security

Choose settings for installing third-party java applications, or applications from entrusted domains and so forth.

Games

You may play Puzzle and Magic Sushi game. With the help of Game Settings, you can set the Background Music (BGM), Sound effect, Vibration, and Volume of the game.

Profiles

Touch **Home → Profiles.**

The available profiles are: General, Meeting, Outdoor, Indoor, Headset, and Bluetooth and also you can set the tone, volume, alert, and ring etc. with Customize option so that whenever you receive an incoming call or a new message, you can customize the use of your phone to different types of call environments.

FM radio

Touch **Home → Multimedia → FMradio.**

The FM radio application turns the mobile phone into a portable FM radio device. It primarily provides users the interface to a single-chip electronically turned FM stereo radio for listening to live-broadcast stations. You must connect the handsfree cable to your phone as it works as an antenna.

The available options are:

- **Channel list:** Displays the list of channels you have saved.
- **Manual input:** Manually enters the frequency of the channel you want to listen.
- **Auto search:** Automatically search for available radio channels.
- **Settings:** The available options are:
  - **Loudspeaker:** Switch loud speaker On or Off.
  - **Record format:** Choose the file type in which the radio will be recorder. The supported formats are: WAV, AWB, and AMR.
  - **Audio quality:** Set the quality of the audio to Low or High.
  - **Record storage:** Select the medium where the recorded radio will be stored. Options are phone memory and microSD card.
  - **Channel effect:** Select the channel as Mono or Stereo
- **Record:** Start recoding the radio broadcast.
- **Append:** Continue recording at the end of a previously recorded sound file.
- **File list:** View list of recorded tracks.

Extra

Calculator

Touch **Home → Extras → Calculator,** to display calculator screen.

Your phone comes with an in-built conversion application that you can use to perform calculations on a daily basis, such as addition, subtraction, division, and multiplication.

Currency converter

Touch **Home → Extra → Currency converter,** and then set the exchange rate. Select one of the displayed options, Input the change rate, and then touch OK. The exchange rate will be kept in the memory till you input a new change rate to replace it. To convert between currencies, input the currency to be converted and then touch OK.

Stopwatch

Touch **Home → Extra → Stopwatch,** to display stopwatch screen.

Use the stopwatch to measure the amount of time elapsed from a particular time when activated to when the piece is deactivated.

The phone comes with two types of Stopwatch:

- Typical stopwatch
- nWay Stopwatch

Ebook reader

The Ebook reader can read .txt electronic documents. You can connect the phone via a USB line to a PC and then place .txt documents in the Ebook folder on the phone or the T-Flash card. Touch **Home → Extra → Ebook reader,** find a .txt document and then select Open Ebook to directly read the .txt document.

Firewall

You may set the blacklist or white list options. When the blacklist function is ON, the numbers set in the blacklist will be refused when there is a

Extra

call or a short message coming from them, while any call or message except from the blacklist will be answered and displayed. When the white list is ON, the numbers set in the white list will be answered when there is a call or a short message coming from them, while any call or message except from the white list will be refused. Please select according to your own demands and use this function carefully. The available options are:

- **Mode:** Select to turn on or turn off this mode. Turn on the white list or the blacklist.
- **AvailableIn :** Select to Blacklist or Whitelist the Incoming call or SMS.
- **Blacklist numbers :** Select blacklist options to enable blacklist numbers.
- **Whitelist numbers :** Select white list options to enable whitelist numbers.

Answer machine

You may select voice answer when you are in the conference or are driving and you are not convenient to answer the call. You may preset voice reply or message and start the voice reply in advance, thus if there is an incoming call now and it won't be put through for a while, the mobile phone will automatically reply in voice and inform the other party that the user is not convenient to answer. It will also prompt the other person to leave a message, or answer the call while the other person is leaving the message. This can effectively avoid embarrassment or misunderstanding, and relax you from inconvenience.

When there is an incoming call, it will automatically play a piece of recorded audio, for example Hello, this is Smith. Sorry I can't answer your call. Please leave your message after a sound of "beep".

Enter the **setting** option to set related parameters.

Awoke Assistant

This option serves as an assistant for you by reminding you about the missed calls and missed messages after a preset interval of time. You can Turn On/Off the Missed Call Awoke and Missed Message Awoke and also adjust the Awoke Gap Time.

Alarm

Set the alarm to ring at a specific date and time. Touch **Edit** to access the following sub-options

- **Status:** Set the status of the alarm to On/ Off.
- **Time:** Set the time at which you wish to ring the alarm.
- **Repeat:** Select the repeat format of the alarm, whether you wish to ring the alarm once, Everyday, or at specific day.
- **Alarm tone:** Set the tone of the alarm.
- **Snooze:** Set the time (in minutes) at which the alarm should snooze.
- **Alert type:** Set the alert type of the alarm whether you wish the phone to Vib. only, Vib. and ring, Ring only, and Vib. only.

Services

STK

Short for SIM Toolkit, STK is a standard for providing value added services and e-commerce over the GSM networks, using the phone to make the necessary transactions.

Internet service

Internet Service browser provides all the basic services of a computer based web browser but simplified to operate within the restrictions of a mobile phone. The Internet Service Browser has the following options.

- **Homepage:** Homepage allows you to enter the default URL on the phone. This will enable you to go to the same page every time you access the homepage.
- **Bookmarks:** Bookmarks enables you to mark a place in an electronic document or a pointer (primarily to an internet URL) in an Internet web browser.
- **Recent pages:** Recent Pages stores the list of URLs which have been recently visited by you on the WAP browser.
- **Offline pages:** Offline Pages stores the list of URLs which you have saved.
- **Input address:** Enter the desired address (URL) of the website or webpage in this column.
- **Service inbox:** Service Inbox receives and stores URLs through text messages from the operator. You can read them and accept to go to the web page and browse.
- **Settings:** You can vary the following settings:
    - o **Select SIM:** Select the SIM on which the GPRS service is activated.
    - o **Profiles:** The various access points that is available on the device by default.

Services

- **Browser options:** Enable or disable browser cache and cookies, set webpage timeout duration, and show or hide images on web pages.
- **Service message settings:** Choose to allow or disallow receipt of promotional messages from the service provider.
- **Clear cache:** Delete the static content store on the device.
- **Clear cookies:** Delete the files that web sites leave on your device at each visit to be able to offer you personalized content in your future visits.
- **Trusted certificates:** View the certificates that were store on the device when you tried to access a secure web site, such as a shopping or Internet banking website.

Data account

Data account contains two types of accounts used to establish GSM/GPRS connections for WAP, MMS and www browsing.

- GSM data
- GPRS

NOTE: Select the appropriate setting from the list for using a particular feature depending on the availability of the operator services.

Third-Party Applications

To help you stay connected with your friends or contacts, the device has dedicated applications to access the computer version of popular social networking platforms such as MSN and Facebook. Also included are instant messaging applications such as Skype, Yahoo, and so forth.

Call

Touch **Home → Call,** Dial input number screen is displayed.

Touch the number from input number screen and make a call through Dial 1 or Dial 2. This screen also provides the option to save the number to SIM1, SIM2 and Phone or the message through SMS or MMS.